
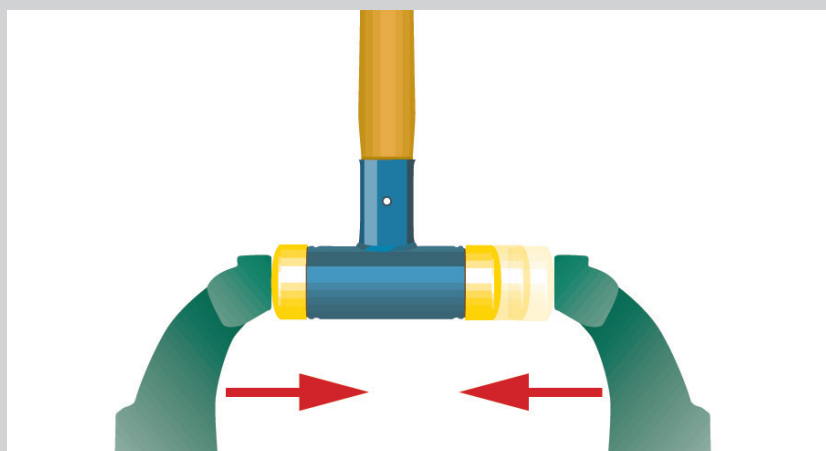


The special metal filling in the hammer casing enables recoilless working.

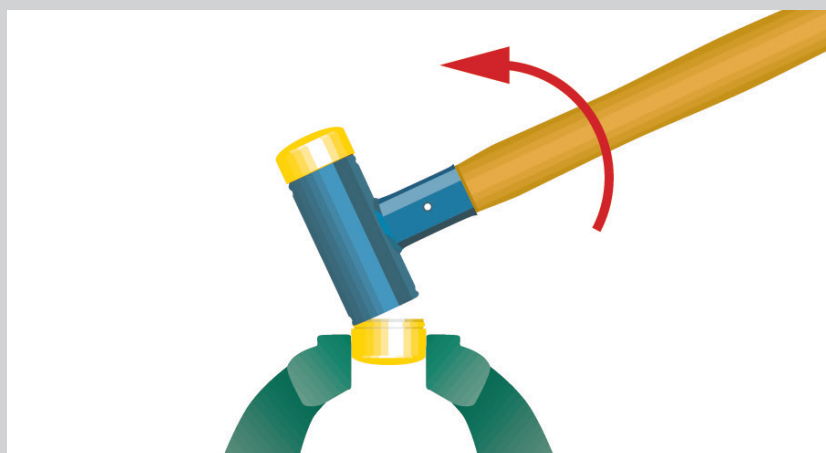

Simple replacement of outworn hammer faces:

1. Secure the hammer in the vice, lift away the old hammer face.
2. Press in the new hammer face in the vice.